

**DRILL TEMPLATE**  
*PATRON PARA TALADRAR*

1/8" DIA.  
 PILOT HOLE  
 TYPICAL

5/16" DIA.

1/2" DIA.

5/16" DIA.

**FOLD HERE**  
*DOBLE AQUI*

**TOP OF DOOR**

**38" - 40" FROM**  
**BOTTOM OF DOOR**

**FOLD HERE**  
*DOBLE AQUI*

5/16" DIA.

1/2" DIA.

5/16" DIA.


**DRILL 5/16" AND 1/2" HOLES HALFWAY**  
**THROUGH DOOR ON EACH SIDE OF THE DOOR**  
**AS MARKED ON TEMPLATE. FIRST PRE-DRILL**  
**EACH HOLE WITH 1/8" DRILL BIT BEFORE**  
**DRILLING 5/16" AND 1/2" HOLES**

5/16" DIA.

1/2" DIA.

5/16" DIA.

ALIGN DASHED LINES OF  
 DRILL TEMPLATE WITH  
 OUTSIDE EDGES OF DOOR

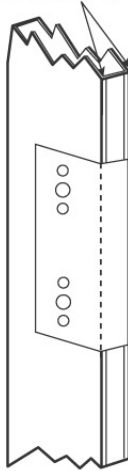

**DRILL 5/16" AND 1/2" HOLES HALFWAY**  
**THROUGH DOOR ON EACH SIDE OF THE DOOR**  
**AS MARKED ON TEMPLATE. FIRST PRE-DRILL**  
**EACH HOLE WITH 1/8" DRILL BIT BEFORE**  
**DRILLING 5/16" AND 1/2" HOLES**

5/16" DIA.

1/2" DIA.

5/16" DIA.

NORMANDY FOR 1-1/4" THICK DOOR